

指纹密码款

Fingerprint password

使用说明书

Operation Instruction

(使用产品前请阅读产品说明 书并妥善保管,以备参考)

(Please read the product instruction before using the product and keep it properly for reference)

8 指纹录入 Fingerprint Entry



1 规格复数

续航能力	待机时间1年以上
Battery Life	More than 1 year standby time
通讯方式	藍牙
Communication	Bluetooth
开锁方式 Unlock Method	通通锁APP、指纹、密码 Tongtong Lock APP、 Fingerprint、Password
开锁时间	≤ 己砂
Unlock Time	≤2 Seconds
工作温度	-5~60摄氏度
Working Temperature	-5~60 degree Celsius
工作温度	0%—90%RH无疑
Working Humidity	0%-90%RH non-condensing
支持的手机系统 Supported Mobile Phone System	Android 4.3/IOS7.0IJLE Android 4.3/IOS7.0 or above

2 添加通通锁APP Add Tongtong Lock APP



打开"微信"扫一扫或者直接在应用 商店搜索"通通锁"APP进行下载

The software (iOS version) can be downloaded from the app store, and the Android version can be downloaded from the application store of Google play, Yingyongbao, Baidu, Ali, 360,

3 新用户注册 New User Registration



输入手机号码,设置管理员密码,获取验证码,点击注册 Enter the mobile phone number, set the administrator password, get the verification code, and click "Register".

4 开锁步骤



通通锁APP,支持多种类型的锁设备,在添加设备时, 先选择正确的锁类型,让锁进入添加管理员模式

Tongtong Lock APP supports various types of lock devices. When adding a device, select the correct lock type first and let the lock enter the "Add Administrator" mode.

5 开锁步骤 Unlock Steps



First, touch the fingerprint module to activate Bluetooth, Click "+" to connect to Bluetooth. Add successfully then you can rename this lock

6 开锁步骤



点击开锁,允许开启篮牙请求,连按篮牙即可开锁(点击开锁, 长按闭锁) Click unlock, allow to open bluetooth request, connect to bluetooth to unlock/click to unlock, long press to lock). 領被添加后,添加者就成为这把锁的管理员,只有 当前管理员将锁删除后,这把锁才能重新被添加

After the lock is added, the adder becomes the administrator of the lock. Only after the current administrator deletes the lock, the lock can be added again.





可以给家人朋友发送钥匙,即开锁的权限,并且可以对开锁的 时间进行限制(接收者的账号即注册通通锁的手机号或者邮箱)

You can send the key to your family and friends, that is, the authority to unlock, and you can limit the time for unlocking (the recipient's account is the mobile phone number or E-mail address registered with Tongtong Lock).

9 指纹录入 Fingerprint Entry



④根据提示, 拾起手指再进行下一次指纹采集, 其6次 According to the prompt, lift your finger to perform the next fingerprint collection, a total of 6 times. 分相位录入成功 Fingerprint entry is successful. 进入指纹详情 Go to fingerprint details.

10 授权管理员钥匙



()点击接收管理员 Click authorize administrators.
()点击流则授权理员 Click add authorized administrator,
()点击流则授权理县区。(ick add authorized administrator)。(科权管理总则形成。可以证据的问题((包含有)的定分流流流 部分于可见者等解释, Authorized administrator key, time limit can be set (the recipient's account it is the mobile primore number or E-mail address registered with Tongtong Lock).

11 操作记录



①点击操作记录 Click operation record. ②点击读取记录即可获得最新的操作记录,可以看到是谁在什么 时间用什么方式开锁。Click read record to get the latest operation record, and you can see who, when and how to unlock the lock.

12 设置 Set Up



Contains the basic information of the lock, etc. Among them, the wireless keyboard and door sensor do not belong to the function of the lock, and remote unlocking needs to connect to the gateway.

13 安全问题 Security Issue



修改密码: 先输入旧密码,再设置新密码 Change Password: Enter the old password first, then set the new password. 登杜斯设备时,可通过阻答问题进行安全验证 When you for in to a past device.



1. Warranty: 180 days

14 售后服务

After-sale Service

2. When the lock is sent back for repair, in order to improve the efficiency of after-sales service, the following points should be

① Just send back one lock body. ②You need to write down the reason for returning and the administrator

password on the warranty card or paper, facilitate the maintenance of the maintenance master.

③You need to note the return address, it will be sent back in time