



MACHENIKE

M-GAME

MACHENIKE
GAMEPAD 

G5Pro V2

USER MANUAL 使用说明书

WARRANTY CARD 保修卡

Read manual before use. Keep for reference

使用本产品前请仔细阅读说明书，妥善保存以备参考

PACKING CONTENTS

Please check and confirm the accessories



1 x Controller



 
1 x User Manual, Certificate
Of Compliance



1 x USB Data Cable



1 x 2.4G Dongle



Classic (2), Short (2), Tall (2)

*The classic-thumbstick comes
pre-installed on the controller.

(Short(2),Tall(2))only standard for the Premium Edition)

 
 


 
1 x Controller Stand

(only standard for the Premium Edition)

***Note: 1×Controller Stand , 2×tall-thumbstick, 2×short-thumbstick,
are only standard for the Premium Edition.**

BUTTON LAYOUT

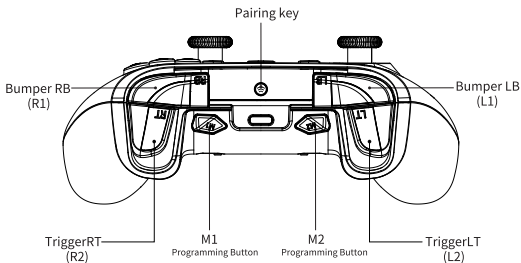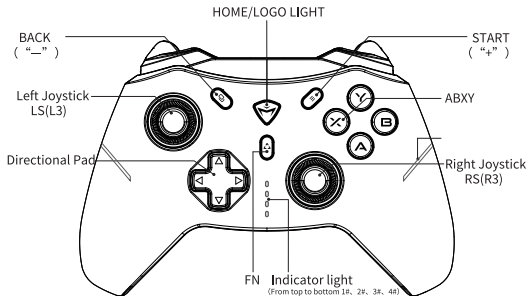

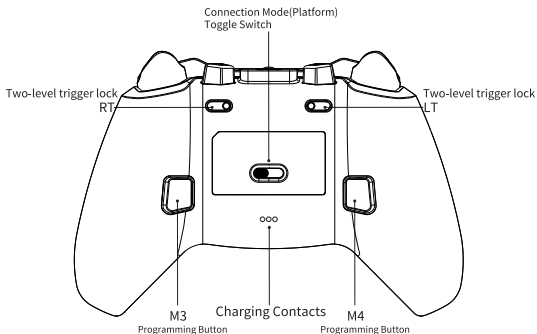

CONNECTION

One-Touch Wakeup Function: please select the corresponding device mode before connecting

2.4G mode — 1# indicator flashes. Device name: Automatically matches receiver connected device;

PC Mode — 2# Indicator flashes. Device Name: Xbox Wireless Controller;

NS Mode — 3# Indicator flashes. Device Name: Pro Controller;

Mobile Mode — 4# Indicator flashes. Device Name: Xbox Wireless Controller;

Connect new devices: Press and hold the pairing button until the controller LOGO flashes quickly, then the controller enters the pairing state. Just connect the corresponding device name above.

Sleep/reconnect: Wireless connection use (Bluetooth/2.4G), if the controller is not operated for 10 minutes, it will automatically go to sleep; Wake up the controller by pressing the HOME key, and it will automatically reconnect.

Turn off the controller: When using wireless connection (Bluetooth/2.4G), press and hold the HOME button for more than 5 seconds to shut down the controller.

 
COMPATIBILITY

2.4G Mode — Supports PC, Switch, and Android TV

- The 2.4G dongle can automatically detect PC mode/Switch mode. You can manually switch between PC mode, Switch mode, and Dinput mode by pressing and holding [⏏]+[≡] for 3 seconds.
- Connect to Switch via 2.4G, you need to turn on the Pro wired controller in the system settings of the host.communication function.

Connecting in 2.4G Mode

- 1, Make the Mode Toggle Switch to the 2.4G position.
- 2, Insert the receiver into the USB port of the device you want to connect to. Click the button at the rear of the receiver. If the indicator light rapidly flashes, it enters pairing mode.
- 3, Press and hold the Pairing key on the front of the controller for approximately 3 seconds until indicator 1# rapidly flashes, indicating that the controller is in pairing mode.
- 4, The controller will automatically pair when brought close to the receiver, and successful pairing will be indicated by vibration. The controller's indicator light will stay lit for 3 seconds to display real-time battery status, and the receiver's indicator light at the rear will remain on.

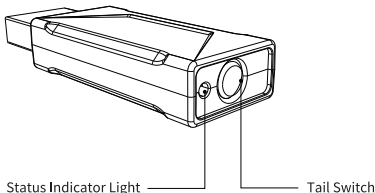

*Tail Switch: Powered on, defaults to reconnection mode - indicator light slowly flashes.
Single click to enter pairing mode - indicator light rapidly flashes.

PC MODE

- In PC mode, when connected via Bluetooth to a computer, it supports native trigger vibration in games (trigger vibration mode needs to be switched to native mode).

Bluetooth Connection Steps:

- 1, Make the Mode Toggle Switch to the PC position.
- 2, Press and hold the Pairing key for approximately 3 seconds until indicator 2# rapidly flashes, indicating that the controller is in pairing mode.
- 3, On the Windows system, open Settings > Devices > Bluetooth & other devices > Add a device > Bluetooth.
- 4, From the list of discovered Bluetooth devices, select the "Xbox Wireless Controller" and once successfully paired, the 2# indicator light will stay lit for 3 seconds to display real-time battery status.

Wired Connection Steps:

- 1, With the controller powered off, make the Mode Toggle Switch to the PC position.
- 2, Use the data cable to directly connect the controller to the device, and it will be ready for use.

NS Mode

- In Switch mode, depending on your preference, you can switch to the Switch button layout by long-pressing the combination key FN + A for 3 seconds, and the controller will vibrate once as confirmation.
- It supports the Home button to wake up the controller and the remote console.
- It supports gyroscopic function, which needs to be enabled in games that support this feature in their settings.

Connection Steps - Bluetooth Connection:

- 1, Make the Mode Toggle Switch to the NS position.

- 2, Press and hold the Pairing key for about 3 seconds until the 3# indicator light rapidly flashes, indicating that the controller is in pairing mode.
- 3, On the Switch home screen, open Controller Settings and select Change Grip/Order, then wait for the controller to appear.

Connection Steps - Wired Connection:

- 1, In the Switch settings, enable the wired controller function and insert the Switch console into the official multifunctional dock.
- 2, With the controller powered off, switch the Mode Toggle Switch to the NS position. Use the data cable to directly connect the controller to the device, and it will be ready for use.

☑ Mobile Mode - iOS/Android /Tablet/Huawei Phone:

Connection Steps - Bluetooth Connection:

- 1, Make the Mode Toggle Switch to the PHONE ☑ position.
- 2 Press and hold the Pairing key for about 3 seconds until the 4# indicator light rapidly flashes, indicating that the controller is in pairing mode.
- 3, Open the device settings, go to Bluetooth, search, and connect to "Xbox Wireless Controller."
- 4, After successful pairing, the 4# indicator light will stay on for 3 seconds to display real-time battery status.

BATTERY DISPLAY

Controller Battery Status Display:

Controller Power Status	Indicator
-------------------------	-----------

- More than 75% battery -----#1/#2/#3/#4 channel indicator lights stay on;
- 50%-74% battery -----#2/#3/#4 channel indicator lights stay on;
- 25%-49% battery -----#3/#4 channel indicator lights stay on;
- 10%-25% battery -----#4 channel indicator light stays on;
- Less than 10% battery -----#4 channel indicator light flashes;
- Charging—— the corresponding channel indicator light flashes;
- Charging is complete——LOGO light stays on, 4 channel indicator lights stay on for 1 minute and then turn off.
- The controller has a built-in 600mAh lithium battery.

Note: During pairing and some function adjustments, the channel indicator lights will temporarily serve as function indicators and return to battery level display after about 3 seconds. When using a wired connection, the channel indicator lights display real-time charging status, while in wireless mode, they display real-time battery level.

Attention! Don't use a power source exceeding 5V 1A to charge the controller, to avoid causing damage to the device.

COMBINATION BUTTONS

FUNCTION	COMBINATION BUTTONS	INDICATOR LIGHTS /NOTES
Light Brightness Adjustment	[FN] + D-pad [←]	/
Light Mode Adjustment	[FN] + D-pad [→]	/
Vibration Intensity Adjustment	[FN] + D-pad [↑]/[↓]	4# - Weak 3/4# - Medium 2/3/4# - Strong 1/2/3/4# - Very Strong
Trigger Vibration Mode Switch	[LT] + [RT] simultaneously pressed + [FN]	1# - Travel Mode 2# - Native Mode 3# - Shared Vibration Mode 4# - Off Successful switch confirmation with vibration
Joystick Dead Zone Switch	[LS] + [RS] simultaneously pressed for 5s	Successful switch confirmation with vibration
Joystick Circular Area Adjustment Switch	[LS] + [RS] simultaneously pressed + [FN]	Successful switch confirmation with vibration
Air Mouse	[FN] + [LS] to turn on/off	/

*When using combination keys, it is essential to follow the specified button sequence mentioned above; otherwise, switching may not work correctly.

Note:

- **Trigger Vibration Mode:**

Travel Mode: Trigger vibration intensity follows trigger press depth.

Native Mode: Only supported for Bluetooth-connected computers, supports native trigger vibration in games.

Shared Vibration Mode: Trigger vibration intensity follows hand grip vibration intensity.

- If you adjust the controller's light color in Keylinker, it will directly override the controller's light color. To switch back to the original light, use the controller's light mode combination keys.

 
GUIDE TO JOYSTICK REPLACEMENT

Note: Turn off the controller before


1. Remove the magnetic cover and pull off the joystick cap;



2. Use the joystick puller, align it with the position of the joystick, and clamp up the joystick.

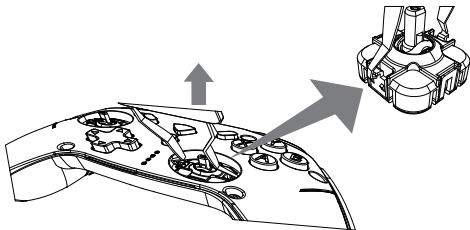


 3. Choose a joystick of strength according to your preference and install it into the controller until you hear a "click" sound.

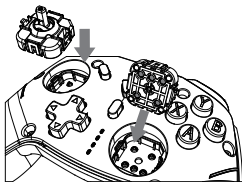

* **Note:** During installation, please make sure the touch point of the joystick is aligned correctly with the switch socket. When installing the joysticks, first snap the buckle on one end, and then snap the buckle on the other end.

 4. After the joystick is installed, attach the joystick cap and Close the magnetic cover.

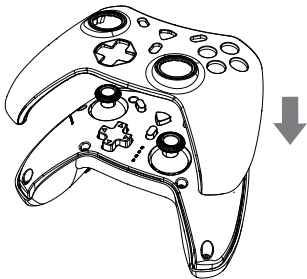



Note:

After replacing the joystick, please calibrate the joystick.



JOYSTICKS AND TRIGGERS CALIBRATION

*During calibration, please gently move the joystick and lightly press the trigger to the fullest extent to avoid joystick/trigger issues.

 

HALL JOYSTICKS CALIBRATION

- 1, Press and hold the [] + [B] + [HOME] buttons to turn on the calibration in the power-off state
- 2, Joystick calibration: fully move the joystick left and right slowly and rotate it more than three times.
- 3, Press the [] button to complete the calibration.

TRIGGERS CALIBRATION

- 1, Press and hold the [] + [Y] + [HOME] buttons to turn on the calibration in the power-off state
- 2, Trigger calibration: press the [LT] and [RT] buttons to the bottom more than once.
- 3, Press the [] button to complete the calibration.

MOTION SENSING CALIBRATION

- 1, Simultaneously press the [] button + [A] button + [HOME] button to activate the calibration function.
- 2, Place the controller flat on the tabletop.
- 3, Press the [] button to initiate automatic calibration.
- 4, Wait for the controller to automatically power off. This indicates that the calibration process has been completed.

ADVANCED FUNCTIONALITY

Programming Buttons Macros:

• Controller Operation:

- 1, With the controller already connected, simultaneously press the FN key + M1/2 3/4 key. The decorative light strip will continuously flash, indicating that you've entered the recording mode. If it doesn't flash, please repeat this operation.

- 2, Sequentially input the function keys you want to set.
- 3, After setting is complete, briefly press the corresponding macro key (M1/M2/M3/M4). The decorative light strip backlight will stop flashing and return to the previous mode, indicating that the configuration is complete.

Note: Clearing the current M1 macro definition:

While the controller is in working status, simultaneously press FN + M1. The decorative light strip will continuously flash, and then press the M1 key once more. The decorative light strip will stop flashing, clearing the current custom function. The same steps apply to clearing other macro keys.

TURBO Function:

Supported TURBO buttons: A/B/X/Y/LB/LT/RB/RT

Manual TURBO Function: When the manual TURBO function is enabled for the A button, you need to manually hold down the A button to activate it.

To enable the TURBO function:

- 1, Press and hold FN+A and then release it. At this point, the A button activates the manual continuous fire function.
- 2, Press FN+A again. Now, the A button activates the automatic continuous fire function.
- 3, Press FN+A once more to disable the continuous fire function.

Note: FN+A/B/X/Y/LB/LT/RB/RT can be used to enable the TURBO function for the corresponding buttons. When buttons are in continuous fire mode, the H-ome button indicator light will flash in synchronization.

For more customized functions, settings can be adjusted in the Keylinker app.

APP Download for Android/HarmonyOS/iOS:

- 1, Download the app and related firmware updates from the Machenike official website: <https://global.machenike.com/>
- 2, Or scan the QR code on the right using your browser to access the download page.
- 3, For HarmonyOS, please download the Android version of the app.

Connection Steps:

 


- 1, After correctly installing the Keylinker software on your phone, confirm the relevant permissions prompts that appear when you first start the app.
- 2, Start the controller in any mode, and you can find "G5Pro_V2" on the Keylinker app's main page.
- 3, Click "G5Pro_V2" to connect and enter the customization interface.

Note: *This function does not require the controller to connect to the mobile phone via Bluetooth. Follow the above operations to open Keylinker to change the controller settings.

ADVANCED FUNCTIONALITY

Dock Function Introduction (Ensure the dock is connected to the device for the following operations to work):

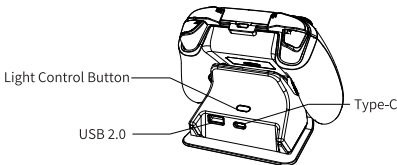

***Light Control Button:** Single-click the light control button to switch between light modes. Long-press the light control button or continuous adjustment of light brightness.

- **Smart Start and Stop:**



When the controller is removed from the dock, it automatically wakes up.



When the controller is placed on the dock, it enters sleep mode and starts charging.

- **Light Linkage:**

When the controller is placed on the dock, the controller's lights can synchronize with the dock's lights. You can also control both the controller and dock lights simultaneously using the controller's combination key [FN]+D-Pad[→] or the dock's light control button.

RESET

When the controller is unresponsive or unable to identify the working mode during operation or access, you can pull out the USB cable of the controller and reconnect it, or use the manual mode to select into the corresponding working mode. If the problem still can not be solved, please long press the [HOME] button for 10 seconds or check the compatibility of the operating system and equipment with the controller, if still can not be solved, please contact the dealer customer service.

Copyright Information

PlayStation is a registered trademark of Sony Interactive Entertainment (SIE).

XBOX/Windows is a registered trademark of Microsoft Corporation.

Android is a trademark of Google Inc.

Nintendo Switch is a registered trademark of Nintendo Co.

MacOS is a registered trademark of Apple Inc. in the United States or other countries.

Other system and product names that appear in this document are generally registered trademarks or trademarks of the respective developer companies. Please note that the ™ logo and ® logos do not appear in this document.

Please consult customer service or the brand's website for updates to the product firmware without notice.

Machenike Official Website: <https://global.machenike.com/>

SPECIFICATIONS

ITEM	DATA
Input Power	5.0V \approx 500mA
Battery Capacity	3.7V /600mAh
Use Distance Range	\leq 10M

产品清单

请检查并确认附件



1 x 手柄



1 x 使用说明书、保修卡、合格证



1 x USB充电数据线



1 x 接收器



2x高摇杆、2x中摇杆、2x低摇杆

*中摇杆出厂默认安装在手柄上

*高低摇杆仅典藏版标配



1 x 底座 (典藏版标配)

***备注：**1 x 底座、2 x 高摇杆、2 x 低摇杆仅典藏版标配

按键布局

HOME键/LOGO指示灯

BACK键
（“—”键）

START键
（“+”键）

左霍尔摇杆
（L3）

四功能按键

十字方向键

装饰灯带

右霍尔摇杆
（R3）

FN键 通道指示灯

（*从上到下为1#、2#、3#、4#）

配对键

肩键RB
（R1）

 
 
肩键LB
（L1）

 
右扳机RT
（R2）

M1编程键

M2编程键

左扳机LT
（L2）

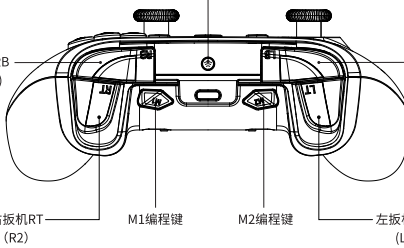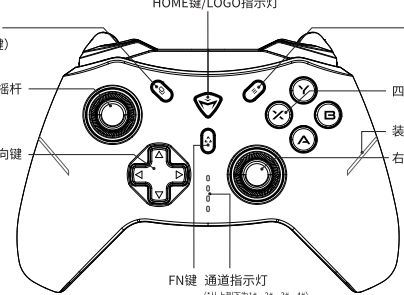

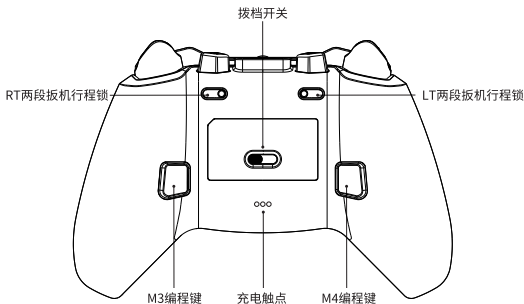

基本连接说明

产品拥有一键唤醒功能,在连接之前请先选择对应的设备模式

2.4G模式——设备的名称:根据连接的设备自动匹配;1#指示灯闪烁。

PC模式——设备的名称:Xbox Wireless Controller;2#指示灯闪烁。

NS模式--设备的名称:Pro Controller;3#指示灯闪烁。

☑手机模式--设备的名称:Xbox Wireless Controller;4#指示灯闪烁。

连接新设备: 长按配对键直到手柄LOGO快闪,则手柄进入配对状态,连接以上对应的设备名称即可。

手柄休眠/回连: 无线连接使用(蓝牙/2.4G),10分钟不操作手柄会自动关机休眠;下次连接设备,通过短按HOME键可唤醒手柄,并自动回连设备。

 
手柄关机: 无线连接使用(蓝牙/2.4G),长按HOME键5s以上手柄关机。

2.4G模式——支持PC、Switch、安卓TV

- 2.4G接收器可自动识别设备可长按[🔌]+[≡]3s 手动切换PC模式/Switch模式/Dinput模式。
- 2.4G连接Switch，需要在主机的系统设置里面打开Pro有线手柄的沟通功能。

连接步骤——2.4G无线连接

- 1、将背后拨档开关拨至2.4G档位；
- 2、将接收器插入要连接设备的USB口，单击接收器尾部开关，指示灯快闪，则进入配对状态；
- 3、长按手柄配对键约3s，直至1#指示灯以及LOGO灯快闪，则手柄进入配对模式；
- 4、手柄靠近接收器自动配对，成功后并震动提醒。手柄指示灯常亮3秒返回实时电量显示，接收器尾部指示灯常亮。

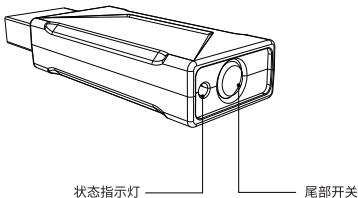

*尾部开关:通电默认为回连模式-指示灯慢闪，单击进入配对模式-指示灯快闪。

PC模式

- PC模式蓝牙连接电脑，支持游戏原生扳机震动（需将扳机震动模式切换到原生模式）

连接步骤——蓝牙连接

- 1、将背后拨档开关拨至PC档位；
- 2、长按配对键约3s,直至2#指示灯以及LOGO指示灯快闪,则手柄进入配对模式；
- 3、在Windows系统中打开设置-蓝牙和其他设备-添加设备-蓝牙；
- 4、在搜索到的蓝牙设备中选中“Xbox Wireless Controller”手柄,配对成功后2#指示灯常亮3秒返回实时电量显示；

连接步骤——有线连接

- 1、在手柄关机的情况下,将手柄背后拨档开关拨至PC档位,通过附赠的数据线直接连接设备和手柄即可使用。

NS模式

- 在Switch模式时,根据您的使用习惯,可以使用组合键FN+A长按三秒切换为Switch按键布局,手柄振动一次提示；
- 支持Home键唤醒手柄及远程主机唤醒功能；
- 支持陀螺仪功能,需在支持此功能的游戏中开启；

连接步骤——蓝牙连接


- 1、将背后拨档开关拨至NS档位；
- 2、长按配对键约3s,直至3#指示灯以及LOGO指示灯快闪,则手柄进入配对模式；
- 3、在Switch主页面中打开手柄--更改握法/顺序,等待手柄出现即可。

连接步骤——有线连接

- 1、在Switch设置中开启有线手柄的功能,并将Switch主机插入官方标配的多功能底座中；
- 2、在手柄关机的情况下,将手柄背后拨档开关拨至NS档位,通过附赠的数据线直接连接设备和手柄即可使用。

手机模式——iOS/安卓手机/平板/鸿蒙手机

连接步骤——蓝牙连接








- 1、将背后拨档开关拨至手机  档位；
- 2、长按配对键约3s,直至4#指示灯以及LOGO指示灯快闪,则手柄进入配对模式；
- 3、打开设备设置-蓝牙,搜索并连接“Xbox Wireless Controller”即可；
- 4、配对成功后,4#指示灯常亮3秒返回实时电量指示。

电量说明

手柄电量显示

手柄电源状态

状态指示灯

- 75%以上电量  • 1#/2#/3#/4#通道指示灯常亮；
- 50%-74%电量  • 2#/3#/4#通道指示灯常亮；
- 25%-49%电量  • 3#/4#通道指示灯常亮；
- 10%-25%电量  • 4#通道指示灯常亮；
- 低于10%电量  • 4#通道指示灯闪烁；
- 正在充电  • 对应通道指示灯闪烁；
- 充电完成  • 4颗通道指示灯常亮1分钟后熄灭。

• 手柄内置600mAh锂电池。

注：在配对及部分功能调整时，通道指示灯会临时用作功能指示，约3秒后返回电量显示功能。有线连接使用时，通道指示灯显示实时充电状态；无线连接使用时，通道指示灯显示实时电量状态。

注意！请勿用超过5V=1A的电源给手柄充电，以免造成机器损坏。

功能组合键操作指南

功能	组合键	指示灯/备注
灯光亮度调整	[FN]+十字键[←]	/
灯光模式调整	[FN]+十字键[→]	/
震动强度调整	[FN]+十字键[↑]/[↓]	4#—弱 3/4#—中 2/3/4#—中强 1/2/3/4#—强
扳机震动模式切换	[LT]+[RT]同时下压+[FN]	1#—行程模式 2#—原生模式 3#—共震模式 4#—关闭 切换成功震动提示
摇杆死区切换	[LS]+[RS]同时下压5s	切换成功震动提示
摇杆方圆调教切换	[LS]+[RS]同时下压+[FN]	切换成功震动提示
飞鼠	[FN]+[LS]开启/关闭	仅有线模式支持

*使用组合键时，请务必按照上述的按键顺序进行操作，否则会出现无法切换的问题

备注：

• 扳机震动模式：

行程模式：扳机震动强度跟随扳机按压深度；

 
原生模式：仅支持蓝牙连接电脑使用，支持游戏原生扳机震动；

共震模式：扳机震动强度跟随握把震动强度；


- 若在Keylinker中调节手柄的灯光颜色，会直接覆盖手柄灯光颜色，如需切回原来的灯光，通过手柄灯光模式组合键切换即可

更换摇杆操作指南


- 1、拆开磁吸面盖，拔掉摇杆帽；

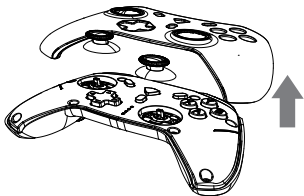

- 2、使用摇杆拔插器，对准摇杆固定的卡扣位置，将摇杆夹起；

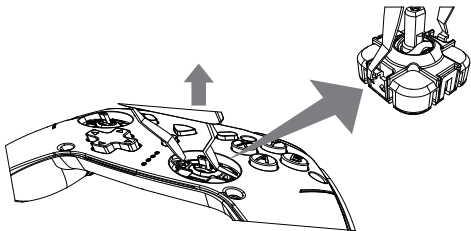 


 3、根据使用习惯选择对应力度的摇杆装入手柄，听到“咔”的声音，表示摇杆成功安装在手柄上；

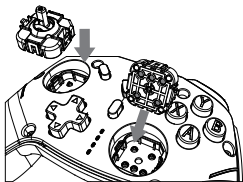

*注意!安装时, 请将摇杆与固定座金属触点的位置一一对应, 再将一端卡扣卡好, 最后卡另一端卡扣。

 4、安装好摇杆之后, 插上摇杆帽, 盖上磁吸面盖即更换摇杆完成。

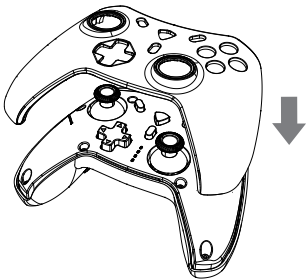



温馨提示:更换摇杆完成之后, 请进行摇杆校准, 以免影响正常使用。



摇杆扳机校准操作

*校准时，请轻转摇杆以及轻按扳机到底，否则会出现摇杆/扳机打不满等问题。


 
摇杆校准

- 1.关机状态下[]键+[B]键+[HOME]键同时按开启校准，校准时指示灯交替闪烁；
- 2.摇杆校准：左右摇杆慢速打满，完整转动三圈以上；
- 3.最后按[]键一次完成校准并自动关机。

扳机校准

- 1.关机状态下[]键+[Y]键+[HOME]键同时按开启校准，校准时指示灯交替闪烁；
- 2.扳机校准：左右扳机各按到底3次
- 3.最后按[]键一次完成校准并自动关机。

体感校准操作

- 1、[]键+[Home]键+[A]键同时按开启校准；
- 2、将手柄平放于桌面；
- 3、按[]键手柄开始自动校准；
- 4、等待手柄自动关机，即校准完成。

拓展功能

编程键宏定义

- 手柄操作：
 - 1、在手柄已连接状态下，同时按下FN键+M1/2/3/4键此时装饰灯条持续闪烁，表示已进入录制状态,若未闪烁请重复此操作。
 - 2、依次录入需要设置的功能键
 - 3、设置完成后短按对应宏键（M1/2/3/4），手柄的装饰灯条背光停止闪烁，并恢复至之前的模式，表示完成设置。

注：清除M1当前宏定义操作：手柄工作状态下，同时按FN+M1，装饰灯带持续闪烁，然后再按一下M1键，装饰灯带停止闪烁，则清除当前自定义功能。其他宏键清除步骤同理。

拓展功能

TURBO功能

支持TURBO的按键：A/B/X/Y/LB/LT/RB/RT；

手动TURBO功能：按下FN+A键可开启A键的手动TURBO功能，需要手动按住A,才会触发；

自动TURBO功能：开启手动TURBO功能之后，再次按下FN+A键，此时A键开启自动TURBO功能，再次按下FN+A,则为关闭连发功能。

注：FN+A/B/X/Y/LB/LT/RB/RT可以开启对应按键的TURBO功能，对应按键连发时，HOME键指示灯跟随闪烁

更多自定义功能可在Keylinker中进行设置

APP下载——安卓/鸿蒙/iOS

- 在机械师官网中下载APP, 以及相关更新的固件。
地址：<https://machenike.com/shoubing/download>
- 使用浏览器扫描右侧二维码进入下载界面；
- 鸿蒙系统请下载安卓版本即可。



连接步骤

- 1、在手机正确安装Keylinker软件后，首次启动时，弹出的相关权限申请需按提示确认；
- 2、任意模式启动手柄，可在Keylinker软件主页中搜到“G5Pro_V2”
- 3、单击“G5Pro_V2” 连接并进入自定义界面；

注：*此功能无需手柄蓝牙连接手机，按上述操作打开Keylinker即可更改手柄设置。

底座功能介绍 (*以下操作务必保证底座与设备相连接)



*单击灯光控制键切换灯光模式，长按灯光控制键可无极调节灯光亮度

• 智能启停：



脱离底座手柄自动唤醒



手柄置于底座，自动休眠，开始充电

• 灯光联动：

- 1、手柄置于底座上，手柄的灯光即可与底座灯光同步，也可通过手柄组合键 [FN+十字键→] 或者底座灯光控制键，同时控制手柄与底座的灯光。

重置手柄

当手柄在操作过程中或接入时，出现无响应或无法识别工作模式时，可以将手柄的USB连接线拔出并重新连接，亦可使用手动模式选择进入相应的工作模式。如果问题仍不能解决，请长按[HOME]键10秒或检查操作系统和设备与本手柄的兼容性问题，若仍然无法解决，请联系经销商客服。

版权等信息

XBOX/Windows 是美国微软公司 (Microsoft Corporation) 的注册商标。

Android 是 Google Inc. 的商标。

Nintendo Switch 是任天堂株式会社便携式游戏机的注册商标。

出现在本文档中的其他系统名和产品名通常是各开发商公司的注册商标或商标。

请注意，本文档中没有出现™标志和®标志。

当产品固件有更新时，请自行咨询客服或前往品牌官网查看，恕不另行通知。

机械师官网：<https://www.machenike.com>

规格

综合

项目	参考值
执行标准	Q/0212LSKJ0910-2019
输入电源	5.0V \equiv 500mA
电池容量	3.7V /600mAh
使用距离范围	\leq 10M

FCC Caution:



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

《废弃电器电子产品回收处理管理条例》

MACHENIKE倡导环保和低碳的消费体验,建议拥有该产品的用户在不需要此产品时,应遵守国家废弃电器电子产品回收处理相关法律法规,将其交给当地具有国家认可的回收处理资质的厂商进行回收处理,降低资源浪费,保护地球自然环境。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板组件	×	○	○	○	○	○
外壳及附件	○	○	○	○	○	○
五金件	○	○	○	○	○	○
马达组件	×	○	○	○	○	○
电池组件	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制

○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定限量要求。

由于目前国际、国内行业的配套技术水平达不到等因素,该产品的少数部件中还存在限用物质。产品在环保使用期限内,在消费者使用过程中并不会出现限用物质的泄露、析出等影响消费者健康的问题,可以放心使用。

印刷电路板组件:包括印刷电路板及其零部件,电子元器件等根据产品型号不同,您所购买的产品可能不会含有以上所有部件



在中华人民共和国境内销售的电子电气产品必须标识此标志,标志内的数字代表在正常的使用状态下的产品的环保使用期限。

MACHENIKE产品保修承诺

- 1、在用户按本技术使用说明书正确使用该产品的前提下，本产品自购买之日起一年内免费保修。保修服务方式为返厂维修，报修方式请扫产品包装盒上售后二维码进行报修。
- 2、我方因下列使用者个人的原因而造成的故障将不提供免费保修服务。
如：
 - (1) 擅自拆装、改装该产品而造成的故障；
 - (2) 在使用、搬运的过程中不慎摔打、跌落、进液、供电规格不符而造成的故障；
 - (3) 因缺乏合理的保养而造成的故障；
 - (4) 没有按使用说明书正确指示进行操作；
 - (5) 第三方厂品、服务或行为导致的故障或损坏等等。
- 3、在要求提供免费保修服务时，您必须提供清晰、完整和准确的销售发票和保修卡，购买产品时，可要求销售商提供上述销售发票和保修卡。
- 4、保修范围外的维修服务，将按规定收费。

保修卡

尊敬的用户：

感谢您选购本公司产品,我公司将按照《中华人民共和国消费者权益保护法》和国家技术监督局、国家工商行政管理局、财政部关于《部分商品修理更换退货责任规定》的有关规定，为您提供保修服务，请认真填写此卡并妥善保管，以便日后凭此卡维修。

客户姓名：_____ 电子邮件：_____

联系电话：_____ 邮政编码：_____

通信地址：_____

产品名称：_____ 产品型号：_____

购机日期：_____

购机渠道：_____

机身编号：_____

产品性能故障表

送修日期	性能故障描述	工程师签字	完成日期

备注：

- 1、请妥善保管此卡，保修时需出示此卡及购买凭证。
- 2、产品自购买之日起，凭购买凭证整机免费保修1年。
- 3、下列情况不属于免费服务范围，但可实行收费维修、终身服务；
 - 1) 不能出示保修说明及发票；
 - 2) 发票涂改；
 - 3) 意外因素或使用不当造成损坏；
 - 4) 未经我司许可，自行修理造成的损坏；
 - 5) 超过三包有效期，经修复仍可继续使用；

合格证

检验
MACHENIKE

