

15.6 Inch Portable Monitor Touchscreen 1080P

User Manual



 
In order to ensure your safe use of this product, please read this manual carefully before using this product and keep it properly.



Email: upperfectglobal02@163.com

Chapter 01 Preparations

Checking the Package Contents

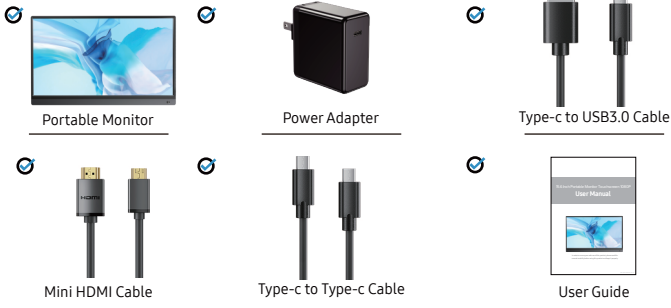

Note:

- If any of the above items is damaged or missing, please contact us immediately. (support@uperfect.com)
- The appearance of the components may differ from the images shown.

Installing the stand case

A



Step1: Place the holster as shown above, part "1" is magnetic.

B



Step2: Place the monitor as shown above, part "1" can be sticky.

C



Step3: Fold the Leather cases part "5" to part "4" as shown.

D



Step4: Stand up the monitor and adjust the angle

Interface Function Introduction



A Speakers

Listen to music, movies, games, and multimedia file

B Micro USB Port

OTG interface. Support extended connection of mouse and keyboard. (It can be used when connecting to Type-C devices, not available when connecting to HDMI devices).

C Mini HDMI Port

Audio and video signal transmission.

D Type-C Port

Video signal transmission.

E Volume +/- Button

The volume can be adjusted by this button. Long press the volume + to select whether the display charges the phone.

F Brightness +/- Button

The brightness level can be adjusted by this button. Long press brightness + enter OSD menu. Long press brightness- enter input menu option.

G Charge Port

Plug in the USB C cable to power the monitor

H Power / Power Indicator Light

Long press this button to turn on or off the monitor. The blue light will be on at startup, the red light will flash during charging, and the red light will always be on when charging is completed.


Chapter 02 Specifications

Panel Type	IPS Screen
Screen Size	15.6 inch
Aspect Ratio	16:9
Resolution	1920*1080
Visual Angle	178°
Built-in Speakers	2*8Ω1W
Input Interface	USBOTG、Mini HD (Signal Transmission)、Type C full function (Power or Signal Transmission from Tunderbolt3 PC or USB3.1 Phone)

Chapter 03 Connecting


Note: For a more stable power supply, it is recommended to use our original power adapter to power.

 TYPE-C signal transfer

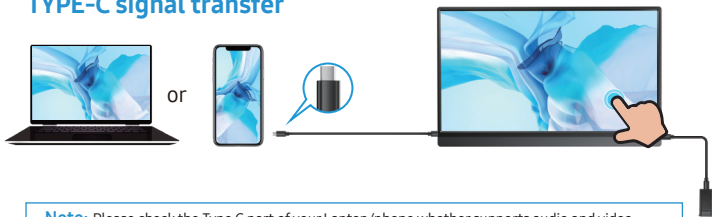

Note: Please check the Type C port of your Laptop/phone whether supports audio and video signal transmission(Thunderbolt3).

 HDMI signal transfer

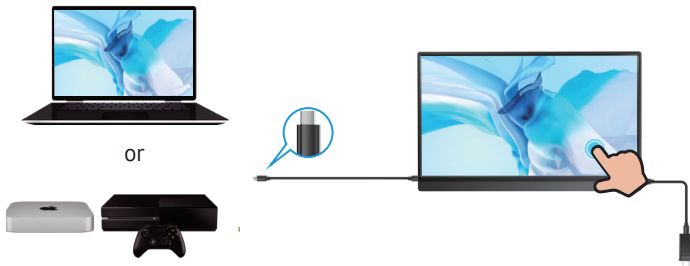

Operation Notes:

1. External power is required if power is insucient, it requires original adapter.
2. Please use original cable and original adapter.
3. When "No signal" or "Power saving mode" appears, please change the type-c cable head to another side and connect to monitor again.
4. When connecting to HDMI device, you need to power the monitor firstly, and then connect the HDMI to Mini HDMI cable.
5. When the single-line connection to the signal interface, the screen will flash, and under voltage will result in Black screen, so please make sure to connect the original power supply.

Chapter 04 Screen Adjustment

On-Screen Display Menu Introduction

1. Picture



3. Color



5. Input



7. Other



9. Information



2. Display



4. Advanced



6. Audio



8. SelfishMode




Chapter 05 Setting Up(Windows10)

Extend Mode / Duplicate Mode/ Display Mode

Way1: Set on the device's Display Settings

A: Right-click anywhere on your desktop and select Display settings to open the Display page.

 B: Scroll down to Multiple displays, then select an option from the drop-down list to determine how your desktop will display across your screens.

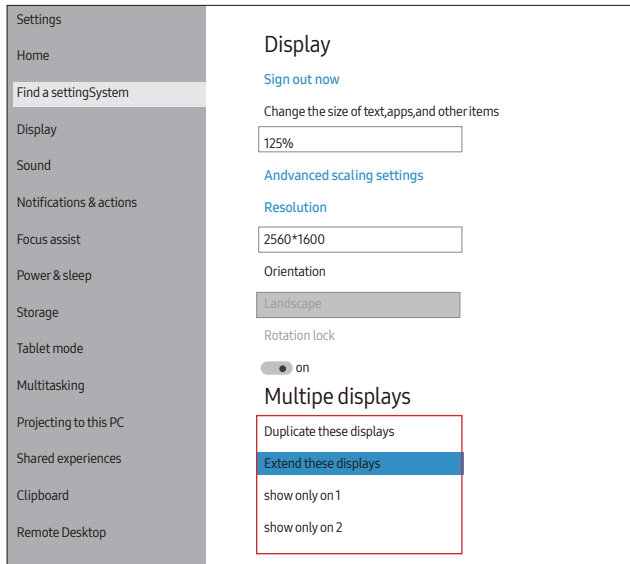


Way2: Set via Windows key + P keyboard shortcut

A: Enter the "Windows" key and "P" keyboard at the same time.


B: select an option from the drop-down list to determine how your desktop will display across your screens.

 PC screen only

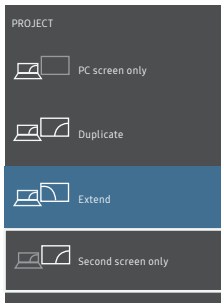

Rotate the Screen

 - 1: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 2: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 3: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

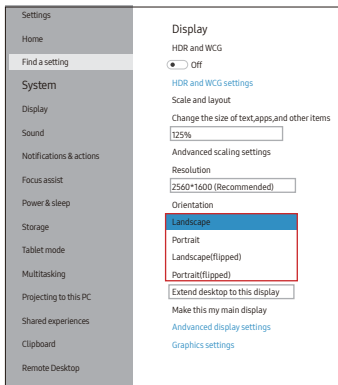

Chapter 06 Q&A

Important Tips:

If you find any issues with your monitor, please contact us support@uperfect.com before returning it. We will help you solve your problems and try our best to make you satisfied. We take full responsibility for our products. If there are any defects that cannot be solved, we will refund or send you a replacement.

Q: No touch

1. For mobile phone, there are two cases.

① There is no touch when connecting to a mobile phone supporting USB3.1. Please contact us to upgrade the display program. This is rare.
② There is correct and usual case that the monitor can't touch when phone doesn't support USB3.1. Please check the phone model to ensure if the phone support USB3.1.

2. For game devices (Nintendo, XBOX, PS4, etc.), the monitor can't touch.

3. For computer equipment / micro-host. In this case, you need to check whether the connection method is correct. Please use the original cable provided. Note: The touch cable must be connected to the computer host instead of a power outlet.

4. If the connection method is correct and you still can't touch it, please try another computer device. If it doesn't work with other computer devices still. Please connect us.

Q: The monitor flickers and keeps switching on and off. How to solve it?

This phenomenon is insufficient power supply to the monitor. Please connect an external monitor power supply to solve this problem.

Q: How to solve the abnormal display of the monitor?

This phenomenon may be caused by interference from other devices, or it may be a problem with your device

① If there is interference from other devices, you can temporarily remove it.

② If you have other computer equipment at home, you can try to connect with another device.

③ If the situation is still the same, please tell us, we will give you the perfect solution within 12 hours.

Q: Why doesn't the display show or no image and only the boot LOGO appears?

① Please check if the monitor power supply is properly connected (or if the battery is charged).

② Please check whether the signal data cable of the device is properly connected, and whether the HDMI or Type-C cable is properly connected to the device to ensure that the device is operating normally.

Chapter 07 Service Support

Dear Customer,

Thank you for purchasing the Portable USB Monitor!

We offer 100% money back guarantee in 30 days and 90 days replacement, 12 month warranty for any issue, professional tech support to ensure no-worry service.

Any query or problem, please contact us via

support@uperfect.com

