

# Hair Dryer Manual

## Foreword

Please read this specification carefully, place it to the credible place when not use to avoid damage, if you present this appliance to other persons, please present this instruction together.

**Electric parameter:** AC110V-127V/AC220V-240V  
50Hz/60Hz

## Attention:

- In before plug-in power, please check the product shows voltage whether accord with the voltage you home.
- Do not dip this appliance into water; do not use it while washing or use it above the vessel with water; do not use near the bathtub, basin or other vessel full of water; do not make it touch with water when cleaning.
- Do not put the blower on the damp surface or cloth when it is working.
- Do not cover the intake opening or exhaust.
- This appliance has over-heat protect setting, when it is too hot (Such as the intake or exhaust was covered) the power will be cut off automatically. Please push the switch button to 0 when come across this case in the course of use, start and use it again after several minutes.
- Please pull out the plug under following cases:
  - abnormal running
  - need cleaning
  - after use 1
- When the blower is used in the bath room, it is still dangerous if the switch is off, so please pull out the plug after use.
- Please send the wicker wire to the appointed after-sale service to change a new one; they have special tools to avoid the dangerous that caused by the replacement by yourself.
- Suggest to install current protected setting as the annex protection in the electric circuit of bathroom. The work current of this setting should not be exceeded 30mA.

## Use:

1. Please check the pressure of socket is whether accord with the pressure of this product before use.
2. There may be several smoke sprayed out when first use, cut it does not mean damage, without any dangerous.
3. The switch shelves can be adjusted to the highest when your hair is wet.
4. You would better adjust the shelves to lower one if your hair is dry or easily damaged.
5. In order to reach the best effect, the distance between the blower and your hair should be bigger than 100mm, do not blow at one place for long time. blow your hair with continuous moving to avoid damage to hair.

## WARNING:

- (1) If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
- (2) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- (3) Children should be supervised to ensure that they do not play with the appliance.
- (4) When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.
- (5) For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- (6) Do not use this appliance near water.



- (7) Do not use this appliance near water in bathtubs, showers, basins or other vessels containing water.

- (8) Correct disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



CAUTION: PLEASE DO NOT USE THIS HAIR DRYER INSIDE THE BATHROOM