 
 


Instruction manual for hair ball trimmer

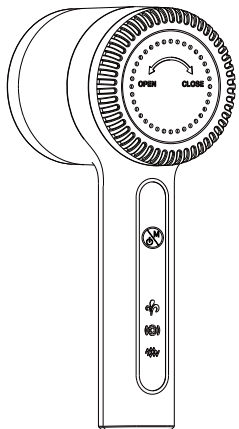

In order to avoid injury caused by misuse, carefully read the operation manual before using this product, And use the product in strict accordance with the purpose indicated in the instruction manual.

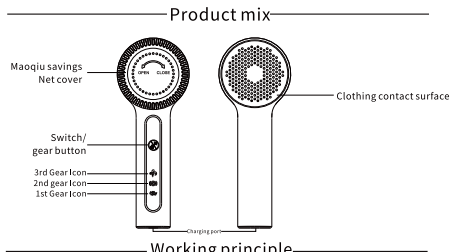


Working principle

The electric motor is driven by the battery to rotate the wind blade, and the rapid rotation of the wind blade drives the rapid rotation of the knife head. The function of the mesh cover is to separate the clothes from the knife head and prevent damage caused by contact with clothes. There are many small holes on the net cover, which form an air duct by using the suction of the rotating wind blade. When contacting clothes, let the wool ball and wool scraps extend into the net cover and be directly cut off by the knife head. The cut off wool ball fell from the side of the knife head into the wind blade below. Under the condition of rapid rotation, the five vertical plates on the wind blade guide the wool ball and wool chips into the chip storage box.

- Warning**
1. After using this product, please store it in a cool and dry place, not in a place with direct sunlight or heat source;
 2. People without behavioral ability and lack of relevant experience and knowledge (including children) must use, clean and maintain this product under the supervision and guidance of their guardian;
 3. There are sharp blades inside the product. Do not put the product where children can reach, Or as a toy, otherwise it will cause harm to children;
 4. Do not insert fingers or metal objects into the blade, which may cause damage to the machine or personal injury;
 5. Charging in humid environment is prohibited;
 6. This product has no waterproof function. Do not directly soak or wash the product to avoid damage;
 7. Do not put the product into fire, water or corrosive liquid to avoid short circuit or other unpredictable hazards;
 8. Non professionals are not allowed to dismantle the machine, repair, refit or replace the battery by themselves, so as to avoid danger;
 9. Do not knock, drop or impact this product violently. If it is damaged and cannot be used normally due to collision or drop, please stop using it immediately;
 10. Do not charge the product for a long time without being looked after. Unplug the power cord after charging. If it is not used for a long time, please fully charge it at least once every six months;
 11. This product is only applicable to the trimming of wool balls of general clothes, and should not be used for other purposes.

- Be careful**
1. Before use, the clothes must be tilted to prevent wrinkles, so as to avoid damage to the clothes during pruning;
 2. Please do not use the wool ball trimmer to handle the clothes worn on your body, so as not to cause damage to your body and clothes;
 3. When cleaning this product, do not wipe it with corrosive liquid or gasoline to avoid damage to the product;
 4. When charging, please make sure that the product is closed. Do not place it in a hot and humid place for charging;
 5. As the blade is relatively thin, do not press the product surface forcibly or beat it with a hard object, otherwise the blade edge may be damaged;
 6. Before use, please install the back cover on the machine body correctly;
 7. When it is not used for a long time for seven days, after separating the fuselage and charging connecting wire, be sure to turn off the power supply and keep it;
 8. Do not use the battery until it is completely discharged. It is recommended to charge it at any time before using it;
 9. Before discarding the appliance, the battery must be taken out of the appliance;
 10. Before taking out the power supply, the appliance must be powered off, and the battery should be disposed of safely. It should be thrown into the red non reusable trash can. Do not throw it randomly to avoid environmental pollution.

Reminder:
Put the clothes flat first, and pay special attention to the following positions when cutting the wool ball:

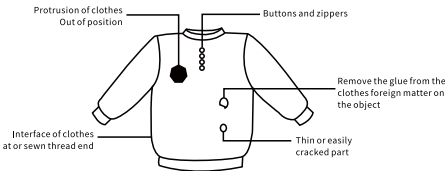

In case of any abnormality or failure of this product, it should be stopped immediately. Please deal with it according to the type of failure. If necessary, contact the customer service for after-sales maintenance.

Note: This product cannot be used on down clothing!

- Product usage**
- ◆ first lay the dry clothes on a horizontal surface and flatten the folds of the clothes.
 - ◆ long press the switch button and short press the gear button according to the clothing materials to select gears 1-4.
 - ◆ fully fit the clothing contact surface with the clothing and move it back and forth (it is recommended that the clothing contact surface be vertical to 90° for better trimming effect).
 - ◆ after use, long press the switch button to shut down, remove the wool ball storage net cover, clean the wool ball debris, install it and store it in a cool and ventilated place.
- *When removing the wool ball storage net cover, please rotate it in the direction of the arrow on the net cover And remove and install, do not pull violently, so as not to cause the snap to break and cannot be installed.**
- *When using or removing the cover for cleaning, it is necessary to turn off the power supply. When the power is turned on, do not remove the mesh cover to avoid machine damage or personal injury.**

Key description:

- ◆ Switch/gear key: press the power on button for a short time. After the power on, press this button for a short time to cycle through gear changes, gear 1 → gear 2 → gear 3. When the power is off, press and hold for 2S to shut down.
- ◆ In use, the three gear lights flash at the same time when low power is detected. Please charge as soon as possible to avoid automatic shutdown due to low power.
- ◆ Automatic shutdown setting: After starting the machine, the machine will automatically shut down in about 30 minutes without touching the power on button. If the power on button is touched, the time will be recorded by the last touch time. After 30 minutes, the machine will automatically shut down and cycle in turn.

Product parameters

Product name	Wool ball trimmer	Model	V20
Rated voltage	DC3.7V	Rated power	5W
Charging voltage	DC5V	Net weight	about140g
Product size	159*60*78mm	Executive standard	GB 4706. 1-2005 GB 4706. 9-2008

Charging method:

1. Please connect the USB charging cable included in the product to the host and the following USB power materials. (USB connector for charging, mobile phone charger, portable power bank, USB connector for vehicle, USB interface for computer or notebook)
2. Charger above DC5V / 500mah is recommended3. When charging, the working icon will flash. When fully charged, the working icon will be on for a long time.

4. After charging, be sure to unplug the power supply to avoid charging for a long time and reduce the battery life.
- *The machine must be fully charged after unpacking! This machine must be charged when it is turned off! The charging cable must be unplugged before starting up.**
- Cleaning and maintenance:**
- *After use, please turn off the power supply, remove the net cover in the direction indicated by the net cover, and pour out the debris.
 - *Wipe the machine body with a dry rag or a semi dry rag without dripping water. Use a small brush to gently sweep the debris inside the machine, and place too much debris to jam the blade.
 - *After cleaning, install the net return cover and keep the machine in a cool and dry place.
 - *If it is not used for a long time, it is recommended to charge once every six months and place it in the.

Fault analysis and troubleshooting

Fault phenomenon	Exclusion method
The machine does not work	1. Cover the net cover again 2. Fully charge the product 3. Clean the foreign matters on the blade and blade 4. Contact customer service for after-sales consultation
Wool ball cutting squalor	1. Recharge 2. Clean the wool ball storage net cover
The product cannot be charged	1. Plug in the charging socket again 2. Change the suitable charger for charging 3. Contact customer service