

K30 (联想品牌) 产品说明书 尺寸: 50x70mm 材质: 128双铜 双面印刷 风琴折

联想thinkplus BT version Speaker K30
蓝牙音箱



使用说明书
使用前请阅读使用说明书

产品规格

蓝牙版本: V5.0
有效距离: ≥10M
电池容量: 1200mAh
额定输入: 5V = 500mA
充电时间: 约3小时
播放时间: 约6小时
喇叭规格: 52mm 4 Ω 5W
频率响应: 100Hz-18KHz

物品清单

音箱 x 1
充电线 x 1
说明书 x 1

产品使用注意事项

- 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
- 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
- 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
- 请勿将本产品放置于热源附近或直接暴露在光源附近。
- 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

按键与功能



电源键: 长按开机或关机
 上一曲: 短按为上一曲, 长按为音量减
 下一曲: 短按为下一曲, 长按为音量加
 播放/暂停: 短按为播放/暂停, 双击进行TWS2.0配对
 接听/挂断: 单击接听/挂断, 双击回拨, 长按拒接

关机: 当不使用音箱时, 长按“电源”键关机, 防止电能消耗。低电量报警及自动关机功能, 当电池电量低于10%时, 音箱会发出提示音, 此时应及时给音箱充电, 当电量低于3%时, 机器将会自动关机。

产品操作说明

一. 蓝牙使用方法

- 长按“电源”键约3秒开机, 提示音响起, 蓝色灯快闪。
- 打开蓝牙设备设置, 搜索蓝牙连接名“联想thinkplus-K30”点击连接, 蓝牙连接成功提示音响起, 蓝灯长亮; 再次使用此音箱时, 开启音箱与智能设备蓝牙, 会自动回连。
- 蓝牙自动连接功能: 蓝牙连接成功后, 当超过有效距离时会自动断开, 待回到有效距离后蓝牙音箱和智能设备又会自动连接。

二. 指示灯状态

- 蓝牙模式: 已连接状态, 蓝色灯长亮, 播放音乐时蓝灯慢闪。
- 配对状态: 蓝色指示灯快闪。
- 充电指示: 充电红灯亮起, 充满红灯灭。

常见问题及解决方案

故障	解决方案
多次连接配对不成功	关闭音箱重新开机或在手机上关闭蓝牙再打开
音乐播放出现断音	连接距离是否超出范围或音箱与手机之间有障碍物
播放无声	检查音箱是否静音/小
无法开机	音箱内置电池是否有电
电源灯不亮	检查充电接口是否插好

产品中有有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
 表格标记“X”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。

印刷电路板组件: 包括印刷电路板及其零部件, 电子元器件等, 根据产品型号不同, 您所购买的产品可能不会含有以上所有部件

在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常的使用状态下的产品的环保使用期限。

保修声明

免责声明
本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

保修声明:
就本文件附随的产品做如下保证: 如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量问题发生损坏, 能修理的, 免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。

如申请保修, 请先致电产品服务热线电话, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。

以上保证不适用于下列情况:
 1. 超过三包有效期的;
 2. 涂改保修卡、产品编码与产品本体不符;
 3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
 4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
 5. 拉链、塔扣因受力过大而损坏;
 6. 因承载过重造成的脱线或断裂;
 7. 任何因尖锐物体造成的损坏;
 8. 有烧痕或水浸迹象的产品;
 9. 因擅自拆改导致的损坏;
 10. 产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。

保修声明

11. 如产品原有标识标签被更改或损毁, 本保证将失效。产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证, 且仅在中國大陸地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权益。

服务热线: 400-812-0102
售后邮箱: frank@szeyan.cn

“Lenovo”, “thinkplus”是联想集团所属企业的商标, 提及的其他公司、产品和服务名称可能是其他公司的商标。
版权所有©2022联想集团所属企业及其许可方保留所有权利。



Lenovo thinkplus BT version Speaker K30



User manual
Please read all instructions carefully and retain for future use

Specification

BT Version : V5.0
Transmission distance : ≥10M
Battery capacity : 1200mAh
Rated input : 5V = 500mA
Charging Time : About 3 hours
Playing Time : About 6 hours
Horn specification : 52mm 4 Ω 5W
Frequency response : 100Hz-18KHz

Packing list

Microphone x 1
Charging Cable x 1
Manual x 1

Precautions for product use

- Don't attempt to disassemble the unit and change any part, except there is operation method mentioned in the manual.
- Don't expose the unit to liquid, moisture or humidity, since it is not a waterproof product.
- Disconnect the unit with your Bluetooth device and move it to the safe area if the liquid get inside the unit.
- Don't assemble or disassemble the unit to avoid electric shock, if there is water on your hands.
- Don't expose the unit to extremely high temperature or dispose of the unit in fire as it will result in an explosion.
- Don't place the unit in an electromagnetic interference environment to avoid malfunction.

Buttons and functions



Power button: long press to turn on or off
 Previous song: short press is the previous song, long press is the volume decrease
 Next song: short press is the next song, long press is the volume increase
 Play/pause: short press for play/pause, double click for TWS2.0 couplet
 Answer/hang up: click answer/hang up, double click to call back, long press to reject

Shut down: When the speaker is not in use, press and hold the "power" key to shut down to prevent power loss. Low battery alarm and automatic shutdown function: When the battery power is less than 10%, the speaker will emit a beep. At this time, the speaker should be charged in time. When the battery power is less than 3%, the machine will automatically shut down.

Operation Instruction

- How to use BT version
 - Press and hold the "power" button for 3 seconds to turn on the device, the sound will sound, and the blue light will flash quickly.
 - Open the BT device settings, search for the BT version connection name "联想thinkplus-K30" and click connect, the BT connection is successful and the sound will turn on and the blue light will be on; when you use the speaker again, turn on the speaker and the smart device BT, it will automatically connect back.
 - BT automatic connection function: after the BT connection is successful, it will automatically disconnect when the effective distance is exceeded. After returning to the effective distance, the BT version speaker and the smart device will automatically connect again.
- Indicator status
 - BT mode: connected state, the blue light is on, and the blue light flashes slowly when playing music.
 - Pairing status: the blue indicator light flashes quickly.
 - Charging indication: the charging red light is on, the full red light is off.

Common problems and solutions

Malfunction	Solution
Unsuccessful pairing	Turn off the speaker and turn it on again or turn off Bluetooth on the phone and turn it on
Staccato	Whether the connection distance is out of range or there is an obstacle between the speaker and the phone
Play silently	Check if the speaker is the smallest
Can not boot	Whether the built-in battery of the speaker is charged
Power light is not on	Check whether the charging port is plugged in

Name and content of hazardous substances in products

Part Name	Harmful materials					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.
 ○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in Below the limit requirements specified in GB/T 26572.
 ×: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirements specified in GB/T 26572.
 The parts marked with "X" on the form cannot be replaced by hazardous substances due to restrictions on the global technological development level.

Printed circuit board components: including printed circuit boards and their parts, electronic components, etc.
 Depending on the product model, the product you purchased may not contain all the above components

Electronic and electrical products sold in the People's Republic of China must mark this Logo, the number in the logo represents the product under normal use environmental protection use period.

Warranty statement

Disclaimer
This user manual does not have any form of guarantee, position expression or other implication.
The mentioned products, specifications and information are for reference only, and the content will also be updated on the webpage at any time, without additional line notification.

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired free; if the manufacturer confirms that it cannot be repaired, free replacement; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchase date by sale The ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 Months calculation. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.
The above guarantee does not apply to the following situations:
 1. The validity period of the three packs is exceeded;
 2. Alteration of the warranty card and product code does not match the product body;
 3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage-impaired or damaged;
 4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accident bad;
 5. The zipper and buckle are damaged due to excessive force;

Warranty statement

- Disconnection or tearing caused by excessive load;
- Any damage caused by sharp objects;
- Products with signs of burning or water immersion;
- Damage caused by unauthorized disassembly;
- Aging, discoloration, abrasion, rupture and other losses occurred during normal use of the product.
- If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should Check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

After-sales service Email: frank@szeyan.cn
Service supervision hotline: 400-812-0102

“Lenovo”, “thinkplus” belongs to affiliated enterprises of Lenovo Group. Mentioned other trademarks, company names, products or services name may be a trademark of affiliated enterprises of Lenovo Group or another company. Copyright © 2022 Lenovo Group and its licensors. All rights reserved.

