

Home Goods - Product Instruction Manual

1. Product Overview

This instruction manual applies to a series of home goods, including but not limited to household storage boxes, non - slip coasters, laundry baskets, and kitchen dishcloths. These products are designed to enhance the convenience and comfort of daily home life, providing practical solutions for storage, protection, and daily cleaning.

2. Product Usage Instructions & Usage Restrictions

2.1 Household Storage Boxes

Usage Instructions

1. Before use, check the storage box for any damage such as cracks or broken parts. If any damage is found, do not use it.
2. Place the storage box on a flat and stable surface to ensure it does not tip over easily.
3. Sort and place items into the storage box according to your needs. Do not overload the box beyond its maximum load - bearing capacity (indicated on the product label, usually 5 - 8kg for small - sized boxes and 10 - 15kg for medium - sized boxes).
4. When closing the lid (if equipped), ensure it is properly aligned and closed tightly to prevent dust from entering and items from falling out.

Usage Restrictions

1. Do not use the storage box to store flammable, explosive, corrosive, or toxic substances.
2. Avoid placing the storage box in areas with high temperatures (above 60°C) or direct sunlight for a long time, as this may cause deformation or damage to the box.
3. Do not use the storage box to carry heavy items for a long distance by dragging it on rough ground , which may wear out the bottom of the box.

2.2 Non - slip Coasters

Usage Instructions

1. Clean the surface of the coaster and the tabletop where it will be placed to remove any dust, oil, or water stains.
2. Place the non - slip side of the coaster (usually the side with a textured pattern or rubber material) downward on the tabletop.
3. Put the cup, bowl, or other tableware on the coaster to prevent scratches on the tabletop and water stains from leaving marks.

Usage Restrictions

1. Do not use the coaster in an oven, microwave, or dishwasher. Clean it with a damp cloth and mild detergent, then dry it with a clean towel.
2. Do not use the coaster to place extremely hot items (above 200°C) such as a pot just taken out of the stove, as this may cause the coaster to melt or deform.
3. Avoid using sharp objects to scratch the surface of the coaster, which may damage its non - slip function.

2.3 Laundry Baskets

Usage Instructions

1. Choose a suitable location for the laundry basket, such as the bathroom, bedroom, or laundry room , ensuring it is convenient for placing and taking out laundry.
2. Place dirty clothes into the laundry basket. Do not stuff the basket too full to avoid difficulty in carrying and possible damage to the basket.
3. When carrying the laundry basket, hold the handles on both sides (if equipped) evenly to maintain balance and prevent clothes from falling out.

Usage Restrictions

1. Do not use the laundry basket to store wet clothes for a long time, as this may cause mold growth and produce an unpleasant odor. It is recommended to empty the wet clothes and clean the basket regularly.
2. Avoid placing the laundry basket in a humid environment for a long time without proper ventilation, which may cause the basket to rot (for wooden baskets) or deteriorate (for fabric baskets).
3. Do not use the laundry basket to carry sharp objects such as scissors or knives, which may pierce the basket.

2.4 Kitchen Dishcloths

Usage Instructions

1. Before the first use, soak the dishcloth in warm water and add a small amount of detergent, then wash it gently and rinse thoroughly to remove any residual impurities.
2. Use the dishcloth to wipe the surface of tableware, pots, and pans. For stubborn stains, you can add an appropriate amount of detergent and rub gently.
3. After use, rinse the dishcloth thoroughly with clean water to remove any food residues and detergent, then wring it out and hang it in a well - ventilated place to dry.

Usage Restrictions

1. Do not use the dishcloth to wipe hot surfaces such as the surface of a hot pot or stove, as this may cause burns to your hands and damage the dishcloth.
2. Do not mix the dishcloth used for cleaning tableware with the one used for cleaning the floor or other dirty surfaces to avoid cross - contamination.
3. Replace the dishcloth regularly (it is recommended to replace it every 1 - 2 months) to prevent the growth of bacteria and ensure hygiene.

3. Compliance Markings

The following compliance marking is applicable to this series of home goods:

- **CE Mark** "This product complies with the essential requirements of the European Union's Directive 2001/95/EC on General Product Safety (GPSD). The CE marking indicates that the product can be freely circulated within the European Economic Area (EEA).

4. Applicable Regulations & Harmonized Standards

4.1 Applicable Regulations

- **Directive 2001/95/EC on General Product Safety (GPSD)** - Date of adoption: December 3, 2001. This directive ensures that products placed on the EU market are safe for consumers when used as intended.
- **Regulation (EC) No 1907/2006 concerning the Registration, Evaluation, Authorization and Restriction of Chemicals (REACH)** - Date of adoption: December 18, 2006. This regulation restricts the use of certain hazardous chemicals in products to protect human health and the environment.

4.2 Harmonized Standards

- **EN 71 - 3:2019 Safety of toys - Part 3: Migration of certain elements** - Date of publication: March 1, 2019. Although this standard is mainly for toys, it is also referenced for home goods that may come into contact with children to limit the migration of harmful elements such as lead, mercury, and cadmium.
- **EN ISO 105 - X12:2001 Textiles - Tests for colour fastness - Part X12: Colour fastness to rubbing** - Date of publication: November 15, 2001. This standard is applicable to fabric home goods such as laundry baskets and dishcloths to test their color fastness and prevent color fading and staining.

5. Warning / Safety Information

Warning

1. Keep all small home goods (such as small non-slip coasters) away from children under 3 years old to prevent the risk of choking if children put them in their mouths.
2. For home goods made of plastic materials, do not expose them to open flames or high-temperature sources (such as a gas stove), as they may catch fire and release toxic gases, causing harm to human health.
3. When using laundry baskets with wheels (if equipped), ensure the wheels are in good condition and lock them (if there is a locking device) when placing the basket to prevent the basket from moving accidentally and causing injury.
4. Do not use damaged home goods. For example, if a storage box has a broken lid, do not continue to use it to store items, as the items may fall out and cause damage or injury. If a dishcloth has

holes or is severely worn, replace it immediately to avoid affecting the cleaning effect and causing hygiene problems.

5. When cleaning home goods, use appropriate cleaning methods and detergents. Do not use strong corrosive detergents (such as concentrated sulfuric acid or hydrochloric acid) to clean the products , as they may damage the surface of the products and pose a risk to human skin.

（注：文档部分内容可能由 AI 生成）