

Cat Toy Bird User Manual

I. Instructions for Use

1. Inspect the toy for completeness after unboxing.
2. Hang the toy at a location easily reachable by your cat.
3. Recommended play duration per session is 10–15 minutes.

II. Precautions

1. Avoid prolonged chewing or biting by your cat to prevent damage.
2. Regularly inspect for loose or detached small parts.
3. Not suitable for kittens or cats with a tendency to ingest objects.

⚠ATTENTION: Not suitable for children under 36 months.”

III. Feature Overview

1. Realistic design to attract your cat’ s attention.
2. Emits chirping sounds to enhance playfulness.
3. The bird does not fly; it only flaps its wings.

IV. Frequently Asked Questions

1. What if the toy does not rotate? — Check whether batteries are properly installed.
2. What if my cat shows no interest? — Try relocating the toy or adjusting its speed.

