


INSTALLATION STEPS


Aluminum Profile Location Details

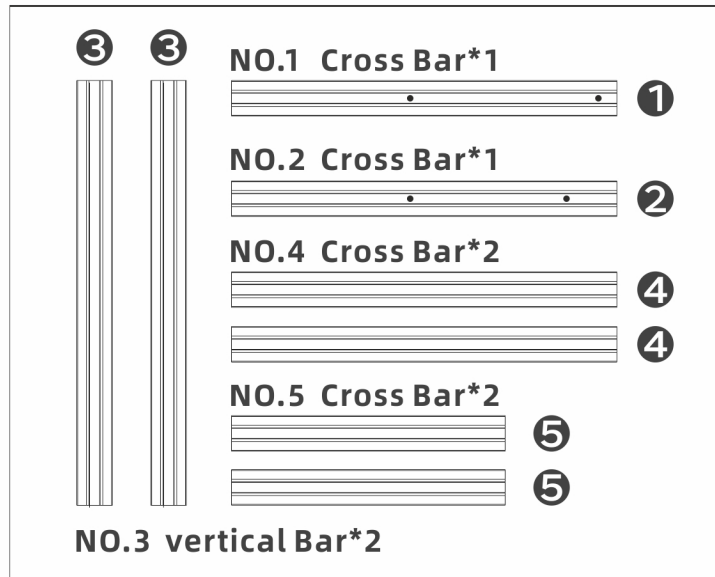



BLOCK CASE
ITX A4 FORM



Position of the crossbar to the mainboard

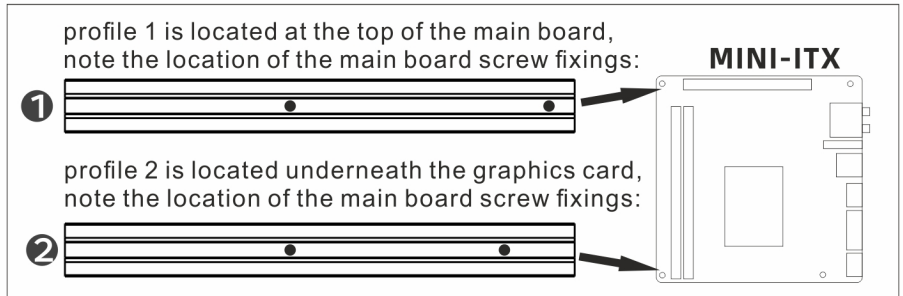


How vertical bar fixed with the Cross bar

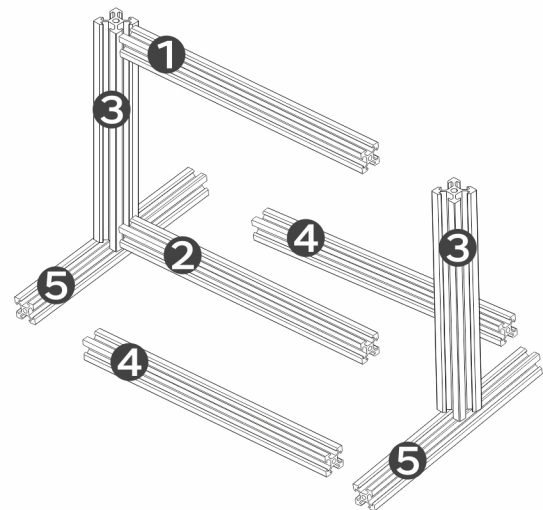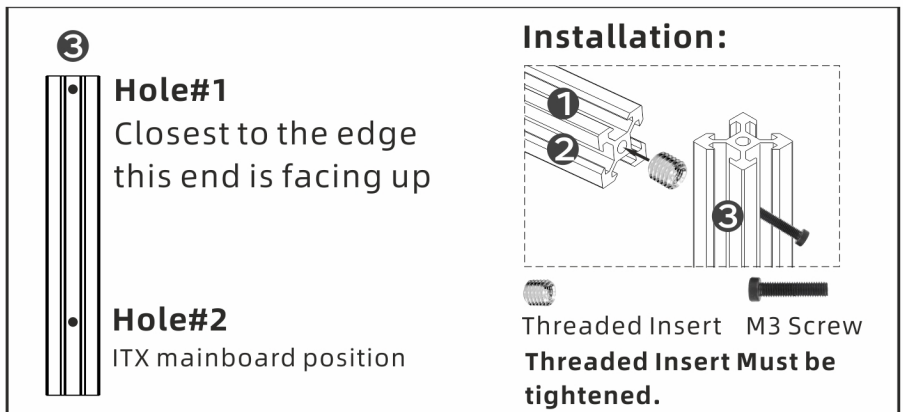





structural diagram

Fixing of vertical bars to the base bracket

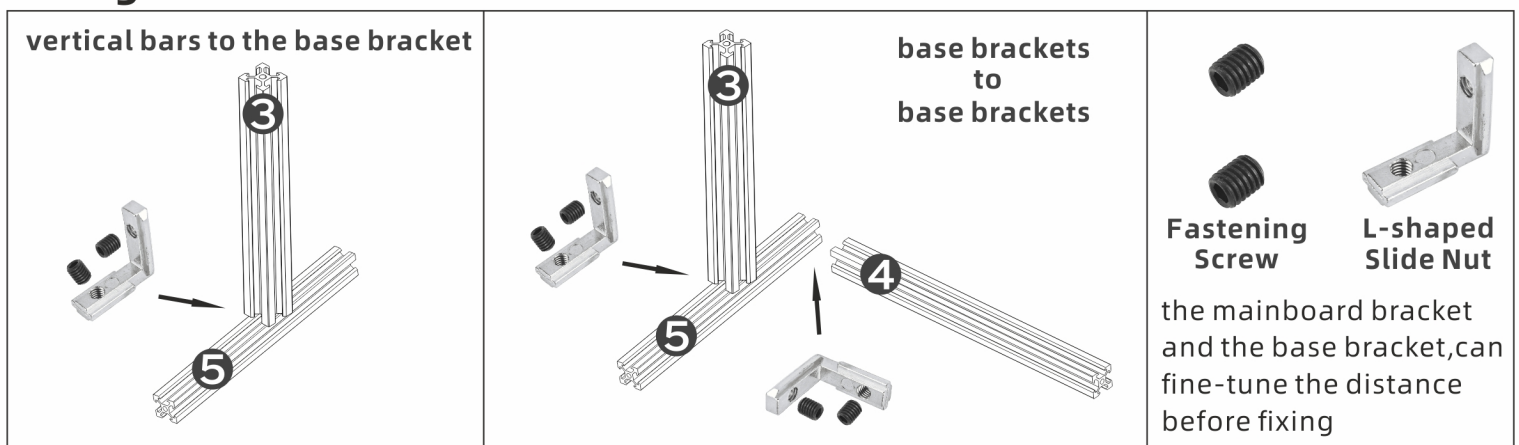

BLOCK CASE

ITX A4 FORM

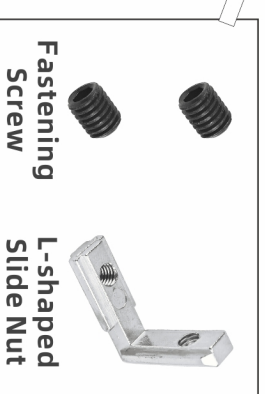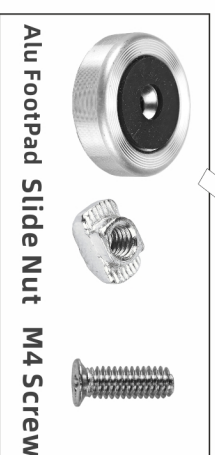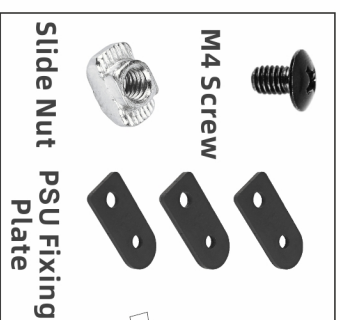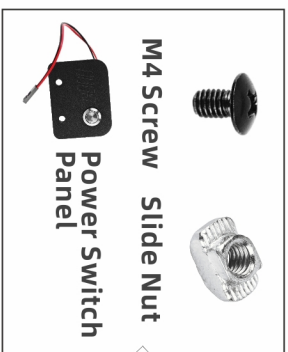

Secure the mainboard bracket and base bracket, the bracket of mainboard can be moved left or right to adjust and then fixed.