

Law enforcement instrument

 


Operating instruction

Please read the instructions carefully before using this product
The instruction manual is for reference only, and the specific operation is
subject to the physical object

1.Product mix

Product description

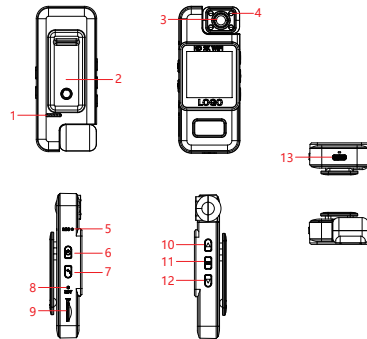

- 1) Bugle
- 2) Back shoulder clip
- 3) Spinning lens
- 4) Infrared lamp
- 5) Marker hole
- 6) Power button
- 7) Return key
- 8) Reset the hole
- 9) TF card slot
- 10) On the key
- 11) OK key
- 12) Under the key
- 13) USB joggle

2.Introduction of key button and interface functions

1. Power switch

- 1) Long press to open / close;
- 2) Click on the breath screen.

2. Return key

- 1) Click and press to switch to the function interface;
- 2) Long press the open / exit menu.

3. On the key

- 1) Select the key up;
- 2) When taking photos and recording video mode, click press to enlarge the focal length;

3)Photo / video / recording mode point long press to open the WiFi mode, long press off again;

4) Replay mode point press to switch to the previous file.

4.Under the key

- 1) Select key down;
- 2) When taking photos and recording video mode, click press to reduce the focal length;
- 3) In video / photo mode, press on infrared (display icon), and press off again;
- 4) Replay mode point press to switch to the next file.

5.OK key

- 1) Click to record the video / photo / recording;
- 2) Confirmation key;
- 3) Press the photo and video mode to flip the lens direction 180, and press again to restore the lens direction.

6. Reset key

When the machine appears flower screen, abnormal crash and other on, with pinhole like things short poke can be forced to shut down.

Note: In video / photo / recording / playback mode, no card plugging!

7.USB joggle

- 1) Interface type: Type-C;
- 2) To connect the external power supply to charge the battery or to provide the working power supply;
- 3) Use to connect the PC terminal for 'memory / PC camera / video mode' operation.

3.Basic operation instructions

1.Mobile detection

- 1) When moving or when some objects move, it will automatically detect and start video recording;
- 2) From dynamic to static state, automatically stop recording after 30 seconds;
- 3) Still, recording is not start.

2.Hidden mode

With the hidden mode on, the device will turn off all sounds and indicators.

3.USB pattern

The device uses USB data to connect to the computer. After the device is automatically turned on, the screen displays three options of 'memory / PC camera / video mode':

Memorizer : In this mode, video, photo and recording files can be accessed and viewed;

PC camera shooting : In this mode, it can be used for the computer camera;

Video mode : Only used for computers to power the equipment.

4.Playback mode

Long press "Return key" to call out the delete menu, long press again to exit;

5.WiFi pattern

1) **Open WiFi** : In the photo / recording / recording interface, long press the 'up button' to turn on WiFi;

2) **Installation and use WiFi**:

Before turning on WiFi, download and install the Wind recorder app on your smartphone. Note: Android, please scan the QR code prompted in the device, or scan the QR code below; iso: search 'wind recorder' in Apple Store to download.

Connection step:



1) After the device is turned on, long press "Up" to open wifi, the screen will show the device wifi name and password indicating that wifi is on;

2) Click on the downloaded APP and find the "Add device" -enter the wifi setting to find the wifi name displayed by the device and enter the password, then the connection is successful.

3) **Close WiFi**: After opening the WiFi function, long press 'Up button' and click 'OK' to turn off the WiFi.


4.Product parameters and specifications

Model	ZC-M11
Master control	AX3292
Image sensor	GC1084
Camera lens	Rotatable lens, 180 degrees
TFT display screen	Color display screen (240 * 240)
Video resolution	4K, 2K, 1920x1080P, 1280x720P
Video file format	AVI
Picture quality	1M, 2M, 3M
Photo format	JPG
Circulating video	Off, 1 minute, 2 minutes, 3 minutes, 5 minutes, 10 minutes, 15 minutes
Colour balance	Automatic, daylight, cloudy day, tungsten wire lamp, fluorescent lamp
Exposure compensation	6, 5, 4, 3, 2, 1, 0, -1, -2, -3, -4, -5, -6
Mobile detection	Close, open
Recording function	Close, open
Camera time mark	Close, open
Keypad tone	Close, open
Time set	User-defined
Auto shut off	Off, 1 min, 3 min, and 5 min
Language	Britain, simplified Chinese, Traditional Chinese, South Korea, Russia, France,

	Germany, the Czech Republic, Portugal, Poland, the Netherlands, Turkey, Thailand
A-c cycle	50Hz, 60Hz
Automatic turn off the screen	Off, 1 min, 3 min, and 5 min
Sound volume	Pass, 1-7
Switch machine volume	Close, open
Hidden mode	Close, open
Recording file format	WAV
Delete	Delete, delete all
Format	Confirmation, cancellation
Reset the system	Confirmation, cancellation
Software version	ZC-M11 V1.1 20240518 V1.0
Working humidity	85%
Working temperature	-20°/+60°
Battery voltage / current / power	3.7V/≤302mA/≤1.117W
Standby current	36.5uA
Low electric prompt	3.67V
DC input / current / power	5V/≤633mA/≤3.165W
Storage card	TF card, with a maximum support of 128G
keying	6 Keys
Joggle	USB, TF card slot

Note: This product is subject to design and specification changes without notice.

 执法仪

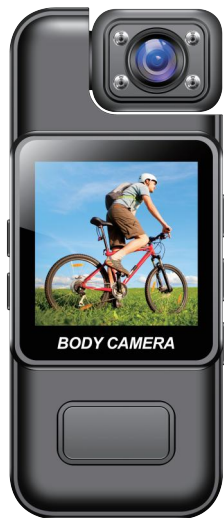


使用说明书

使用本产品前，请仔细阅读使用说明书
说明书仅供参考，具体操作以实物为准

一、产品结构

 产品说明

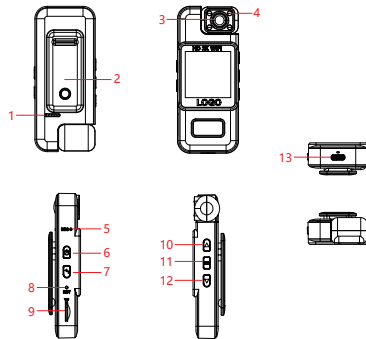

- | | | |
|--------|----------|----------|
| 1)喇叭 | 2) 背面肩夹 | 3) 旋转镜头 |
| 4) 红外灯 | 5) 麦克风 | 6) 电源键 |
| 7) 返回键 | 8) 复位孔 | 9) TF 卡槽 |
| 10) 上键 | 11) OK 键 | 12) 下键 |

13) USB 接口

二、按键及接口功能介绍

1. 电源键

- 1) 长按可开/关机;
- 2) 点按可息屏。

2. 返回键

- 1) 点按可切换功能界面;
- 2) 长按打开/退出菜单。

3. 上键

- 1) 向上选择键;
- 2) 拍照、录像模式时，点按可放大焦距;
- 3) 拍照/录像/录音模式点长按可开启 WiFi 模式，再次长按关闭;
- 4) 回放模式点按切换到上一个文件。

4.下键

- 1) 向下选择键;
- 2) 拍照、录像模式时，点按可缩小焦距;
- 3) 录像/拍照模式下长按开启红外（显示图标），再次长按关闭;
- 4) 回放模式点按切换到下一个文件。

5.OK 键

- 1) 点按可录像/拍照/录音;
- 2) 确认键;
- 3) 拍照、录像模式时长按可将镜头方向翻转 180°，再次长按可恢复镜头方向。

6.复位键

当机器出现花屏、异常死机等情况时，用针孔状的东西短戳一下可强制关机。

注：在录像/拍照/录音/回放模式工作中，禁止拔插卡！

7.USB 接口

- 1) 接口类型：Type-C;
- 2) 用于连接外接电源给电池充电或提供工作电源;
- 3) 用于连接 PC 端可进行‘存储器/PC 摄像/视频模式’操作。

三、基本操作说明

1.移动侦测

- 1) 在进行移动或有物体移动时，会自动进行检测并开始录像;

- 2) 由动态到静止状态时，静止时长到 30 秒后会自动停止录制;
- 3) 静止状态时，不会启动录制。

2.隐藏模式

开启隐藏模式后，设备将关闭所有声音及指示灯。

3.USB 模式

设备使用 USB 数据与电脑连接，设备自动开机后屏幕显示‘存储器/PC 摄像/视频模式’三个选项：

存储器：在此模式下可进行视频、照片、录音文件的存取与查看；

PC 摄像：在此模式下可用于电脑摄像头进行使用；

视频模式：仅用于电脑给设备供电。

4.回放模式

长按“返回键”可调出删除菜单，再次长按退出；

5.WiFi 模式

- 1) **开启 WiFi：**在拍照/录像/录音界面时，长按‘上键’可开启 WiFi；2)

安装与使用 WiFi：

开启 WiFi 功能前，请在智能手机上下载并安装‘录风者’应用程序。注意：Android，请扫设备中提示的二维码，或扫下方二维码；iso:可在 Apple Store 中搜索‘录风者’下载。



连接步骤：

1) 在设备开机后长按“上键”开启 wifi，屏幕会显示设备 wifi 名称与密码表示 wifi 已开启；2) 点开下载的 APP，找到“添加设备”-进入 wifi 设置中找到设备显示的 wifi 名称并输入密码后即连接成功。

3) **关闭 WiFi：**开启 WiFi 功能后，长按‘上键’点击‘确认’即可关闭 WiFi。

四、产品参数与规格

机型	ZC-M11
主控	AX3292
影像传感器	GC1084
镜头	可旋转镜头，180 度
TFT 显示屏	彩色显示屏(240*240)
录像分辨率	4K、2K、1920x1080P、1280x720P
录像文件格式	AVI
图片质量	1M、2M、3M
照片格式	JPG
循环录像	关、1 分钟、2 分钟、3 分钟、5 分钟、10 分钟、15 分钟
白平衡	自动、日光、阴天、钨丝灯、荧光灯
曝光补偿	6、5、4、3、2、1、0、-1、-2、-3、-4、-5、-6
移动侦测	关、开
录音功能	关、开
摄像时间标志	关、开
按键音	关、开
时间设定	自定义
自动关机	关、1 分钟、3 分钟、5 分钟
语言	英、简体中、繁体中、韩、俄、法、德、

	捷克、葡萄牙、波兰、荷兰、土耳其、泰
交流频率	50Hz、60Hz
自动关屏	关、1 分钟、3 分钟、5 分钟
音量	关、1-7
开关机音量	关、开
隐藏模式	关、开
录音文件格式	WAV
删除	删除、删除所有
格式化	确认、取消
重设系统	确认、取消
软件版本	ZC-M11 V1.1 20240518 V1.0
工作湿度	85%
工作温度	-20°/+60°
电池电压/电流/功率	3.7V/≤302mA /≤1.117W
待机电流	36.5uA
低电提示	3.67V
DC 输入/电流/功率	5V/≤633mA/≤3.165W
内存卡	TF 卡，最大支持 128G
按键	6 键
接口	USB、TF 卡槽

注意:本产品保留设计和规格更改权恕不另行通知。