

PRODUCT MANUAL

1. Product Informaton

Product Name: Hair clipper

Model: KM-2290,KM-2293,KM-2296,KM-2293,KM-2797,KM-5027,KM-90-4,KM-90-5,KM-2035,KM-2281,KM-5098,KM-1858,KM-1838,KM-PG1990A,KM-1598,KM-PG809A,KM-PG232,KM-1949,KM-264,KM-2242,KM-2351,KM-809A,KM-2273,KM-1757,KM-1113,KM-1115,KM-MAX2092,KM-MAX5090,KM-1825,KM-1855,KM-678,KM-679,KM-5017H,KM-2286,KM-2295,KM-5083,KM-2010,KM-1691,KM-1677,KM-8502,KM-2121,KM-1766,KM-1763,KM-2379,KM-1926,KM-1928,KM-1743,KM-1767,KM-1572,KM-8526,KM-PG233,KM-034,KM-1697,KM-1698,KM-1699,KM-2373,KM-2268,KM-1772,KM-9163,KM-999,KM-1071,KM-2371,KM-1407,KM-1506,KM-1556,KM-8501,KM-2628,KM-2261,KM-1678

2. MANUFACTURER & EU REPRESENTATIVE INFO

- **Manufacturer:**

Company Name:Yiwu Kemei Electric Appliances Co., Ltd

Address:1377-1,Yinhai International Building Center, Chouzhou Road,Yiwu,Zhejiang,China

Email:694718666@qq.com

 
- **EU Authorized Representative:**

Company Name:eVatmaster Consulting GmbH

Address:Raiffeisen Street2 B11,63110 Rodgau,Hessen,Germany

Email:contact@evatmaster.com

- **Compliance Information**



PAP 20
Raccolla
carta

3. Safety & Warnings

Important Safety Information

Read all instructions before use. Failure to follow these instructions may result in damage to the product or personal injury.

- Warning: Keep the device and its cord out of reach of children under 3 years old.
- Keep away from children unless supervised by an adult.
- Do not use this product for purposes other than its intended use.
- Inspect the product before each use; do not use if damaged.
- Follow installation and operation guidelines to avoid injury.
- Do not expose to water or moisture.

4. Instructions for Use

1. Charging: Connect the provided USB cable to a certified 5V power adapter..
2. After Use: Turn off the device and store it in a dry place. Keep away from children.

Mount the limit comb:

- 1.Align the limit comb with the blade edge
- 2.Slightly forward push to mount it.

Disassemble the limit comb:

Just pull hard the limit comb

Cutter Assembly and Disassembly

Sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with tight after the blade is aligned.

- 1.End of the top blade teeth should be $\frac{1}{32}$ to $\frac{1}{16}$, 0.79mm to 1.59mm back from bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.
- 2.Extreme left hand tooth of top blade must be covering or be to the left of the first small tooth of bottom blade.
- 3.Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade.

Cutter Cleaning and Maintenance

Blade Alignment Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.

Blades must be realigned if they have been removed for cleaning or replacement. To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 0.5-1.0mm back from bottom blade. Compare your clipper blades with the sketch.) If blade alignment is incorrect, add a few drops of oil to the blade, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned.

Cutter Maintenance

To maintain your clipper in peak condition, the blades should be oiled every few haircuts. To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.

Following Guarantees Provided For the Product

1. The product is produced through strict quality management and inspection..
2. If malfunction occurred in fair use, the consumer can enjoy free warranty service according to the warranty card in the purchasing store or our repair center. (The battery and blade belong to consumables, not covered by warranty but provided with fee)
3. No free services for the following situations:
 - A. Damages caused by repair or reformation not approved by our company.
 - B. Damages caused by false or neglectful use, or by accidents.
 - C. Damages caused by natural disasters or abnormal voltage.
 - D. Damages caused by ignoring attentions provided within the product specification.



WARNING: Please mind potential fire risk and strictly follow the instruction manual for charging and storage. For disposal, please check your local authority's website for more information and dispose of the battery safely in accordance with the applicable legal requirements.