

Washing Machine Anti-Vibration Pads Instruction Manual

Brand: No Brand

Product Name: Washing Machine Anti-Vibration Pads

Warning & Safety Information

Keep away from children to prevent choking hazards from ingesting rubber pads or injury from sharp edges. Do not step or tear the pads violently to avoid breakage and loss of anti-slip function. **Not a toy.** Prevent children from chewing or playing with the pads to avoid component detachment and injury. Keep away from high temperatures and open flames to prevent melting and deformation of the rubber. Store separately from sharp objects to avoid scratching and damaging the pad surface. Instructions for Use **Preparation:** Lift the appliance (washer, dryer, fridge, etc.) and clean the base and floor thoroughly. **Installation:** Place one pad under each of the four feet, aligning them to ensure full contact with the foot and floor. **Application:** Suitable for front/top load washers, dryers, refrigerators, freezers, and heavy furniture. **Storage:** Store unused pads flat to avoid deformation. **Cleaning:** Wipe the rubber surface with a dry cloth. **Do not wash or soak.**

Precautions Made of durable anti-slip rubber, dimensions approx. 4.5×6.5×2cm, 4 pieces per pack. Fits most appliance and furniture feet. Do not overload the appliance to prevent pad deformation and loss of stability. Keep away from chemicals and oil to prevent rubber aging and cracking. Avoid prolonged exposure to sunlight to prevent brittleness and loss of elasticity. Minor size and color differences may exist; replace if the pad cracks, deforms, or loses grip. Discontinue use immediately and replace if the pad is cracked, deformed, or no longer provides anti-slip support.

Features **Anti-Slip & Anti-Walk:** Strong friction prevents washers and dryers from "walking" or sliding during operation. **Vibration Damping:** Absorbs shocks and reduces noise, creating a quieter, more comfortable home environment. **Floor Protection:** Shields floors from scratches and wear caused by heavy appliance movement. **Ventilation & Moisture Control:** Elevates the appliance to improve airflow, preventing rust and moisture buildup at the base. **Versatile Use:** Works with washers, dryers, refrigerators, freezers, and heavy furniture; a universal home accessory.

FAQ

Q: Appliance still moves and slips? A: Re-align the pads under the appliance feet, or replace with new pads if worn. **Q: Rubber cracked and lost elasticity?** A: Keep away from heat and chemicals; replace with a new pad if severely cracked. **Q: Appliance tilts and feels unstable?** A: Adjust the pads to ensure even weight distribution on all four corners, re-leveling the appliance.